

# **Winmate M700D Tablet PC**

**Windows 7**

## **User Guide**

Version 2.00  
Revision A  
May 2013



## Contents

### Chapter 1: Safety Information

Exposure to Radio Use .....	4
RF Exposure Information .....	4
Safety Precautions .....	5
Battery Safety Information .....	5
Electrostatic Discharge .....	5
Driving .....	5

### Chapter 2: About Winmate M700D Tablet PC

About M700D .....	6
Features .....	6
Getting started.....	7
SIM Card and SD Card Installation.....	8
Secondary Battery Installation .....	8
Battery Charging .....	10
Turning On and Off the Device .....	10
Turning the M700D On .....	10
Turning the M700D Off .....	11

### Chapter 3: Operating M700D Tablet PC

Using Touch Screen.....	12
Using Input Panel .....	13
Open Input Panel .....	13
Move Input Panel .....	13
Adjust Input Panel Size.....	14
Using Control Panel .....	14
Hot tab key function.....	15
Hot tab software utility function.....	15
Utilities.....	16
F1 and F2 shortcut function key.....	16
Performance.....	17
Touch Lock.....	17

## **Chapter 4: Connecting to Network and Devices**

Connecting to Bluetooth device .....	18
Using Bluetooth feature .....	18
Connect to Bluetooth device .....	18
Disconnect from Bluetooth device .....	18
Connecting to Wi-Fi .....	19
Using 3G function.....	19

## **Chapter 5: Power Management**

About AC Adapter .....	20
Charging status .....	20
Charging the battery pack.....	20
Charging Approaches.....	21
Checking the battery level .....	21
Battery low signals and actions.....	21
Power Management .....	22

## **Chapter 6: Expanding M700D Tablet PC**

Connecting to USB device.....	23
Connecting to Audio device.....	23

## **Chapter 7: Using BIOS Setup**

To use BIOS setup .....	24
BIOS function .....	24
Main Menu .....	24
Advance Menu .....	25
Chipset Menu .....	25
Boot Menu .....	25
Security Menu .....	26
Save and Exit Menu .....	26

## **Chapter 8: Using Recovery DVD**

Hardware preparation .....	28
Start to recover the system by recovery DVD .....	28

## **Chapter 9: Using the Camera**

Open Camera .....	29
Take a Picture .....	29
Shoot a Video.....	29
Camera Control Buttons.....	30

## **Chapter 10: Accessories**

M700D Standard Accessories .....	31
M700D Optional Accessories .....	31

## Chapter 1: Safety Information

### Exposure to Radio Use

M700D series is equipped with Bluetooth, WI-Fi and Cellular modem radio. In some situation or area, user may be required to turn off the radios. For example;

- User's needs to turn the phone OFF when in an area posted "TURN OFF RADIO SIGNAL." to avoid interfering with blasting operations.
- User needs to turn OFF the radio signal in health care facilities. Hospitals or health care facilities may be using devices that sensitive to Radio Frequency energy.
- Aviation authority regulations prohibit user from using phone while in the aircraft.

In order to prevent the handheld from emitting radio signals, do the following step:

- To turn off the device:  
Press and hold the power button to display the *Phone Options* menu for 3 sec then tap the **Power Off** or  
Tap Windows and select Shut down in Windows 7 operating system

### RF Exposure Information

This Tablet PC meets the government's requirement for exposure to radio waves. This Tablet PC is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/Kg. Test for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the Tablet PC is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer user to a wireless base station antenna, the lower the power output.

For body worn operation, this Tablet PC has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions of the handset minimum of 1.5 cm from the body. User of other enhancements may not ensure compliance with FCC RF exposure guidelines. If user do not use a body-worn accessory and are not holding the PDA at the ear, position the handset a minimum of 1.5 cm from your body when the device is switched on.

## Safety Precautions

---



Always completely disconnect the power cord from your device whenever you work with the hardware. Sensitive electronic components can be damaged by sudden power surges

---



Modern electronic devices are very sensitive to static electric charges. Always ground yourself to remove any static charge before touching the CPU Card.

---

## Battery Safety Information

---



Do not use other battery which is not intended for the product. Use only the battery compatible for the device and follow battery usage, storage, and charging guidelines in this user guide.

---



A damage rechargeable Lithium-ion polymer battery can cause explosion or fire. To prevent personal injury and/or property damage:

- Do not open, disassemble, puncture, or crush the battery
- Do not leave or store the device in an area which is near a heat source such as vehicle dashboard, dryer or other heat source.
- Do not attempt to insert foreign object into the battery or allow conductive objects to contact the battery

In the event of battery leak:

- Do not have any contact with the battery fluid
  - If battery fluid leaks onto the skin or cloth, wash the affected area with clean water
- 



Please contact your current Winmate distributor or local Winmate vendor if you suspect damage to your Tablet PC or battery for inspection and reparation.

---

## Electrostatic Discharge

---



Please follow proper electrostatic discharge precaution to prevent static damage that can harm electronic components inside your device

---

## Driving

---



Using mobile device or accessory while driving may cause distraction and maybe illegal in some areas where you drive. Please obey the laws and regulations on the use of mobile device

---

## Chapter 2: About Winmate M700D Tablet PC

### About M700D

Winmate M700D Tablet PC is powered by a 1.6GHz dual-core Intel Atom N2600 processor. This device is capable of running Windows 7 and has 7-inch capacitive multi-touch display offers 1024 x 600 pixel TFT LCD display resolution. Other new era tech includes Built-in WLAN 802.11 2.4GHz a/b/g/n, Bluetooth 2.1+EDR, built-in Neo-6 GPS module, and optional 3G Module.

### Features

This section provides the features of the M700D and describes how to set this device for the first time



## Features

1	7" Touch Screen	Projected Capacitive touch screen
2	Power Button	<ul style="list-style-type: none"> <li>Continuously press the button for 3 seconds to turn on the PC</li> <li>Continuously press the button for more than 8 seconds to force the Tablet PC turn off immediately</li> </ul>
3	Home	To open Windows Start button
4	F1	1 programmable Hot-key to be set up to perform a task specified by user / to start a specific application
5	F2	1 programmable Hot-key to be set up to perform a task specified by user / to start a specific application
6	Menu	Press to open Brightness, Volume, Battery and WiFi / Bluetooth status
7	LED indicator	To indicate the status of the device
8	Battery 2 Status	Orange light : Indicates the device is under charging Green light : Indicates the device is fully charged Red light : Indicates low battery
9	Battery 1 Status	Orange light : Indicates the device is under charging Green light : Indicates the device is fully charged Red light : Indicates low battery
10	Power Mode Status	Blue light : indicates the Power On No light : indicates no Power
11	Volume Up	Increase the volume of music or radio
12	Volume Down	Decrease the volume of music or radio
13	DC Jack	12 V DC In
14	Audio Jack	To connect a set of headphones, external speakers, or an audio device
15	USB Ports	To connect USB flash drive 2.0 / mouse / printer / keyboard, etc
16	SD Card Slot	To store all the information
17	Rubber Bumper	To give IP65 protection for the I/O Interface
18	SIM Card Slot	Accepts 3G SIM card to provide 3G data connection
19	Docking connector	To connect the device to docking station
20	2 MP Rear Camera	To take photo or video
21	LED Auxiliary Light	To provide lighting while using the camera
22	Battery Port	For secondary battery

## Getting started

To start using the M700D for the first time:

- ..... Install  
SIM Card and SD Card
- ..... Secon  
dary battery installation




- .....Charging the Battery


### Sim Card and SD Card Installation

To Install the SIM Card and SD Card:

1. Place the M700D facing up and then locate the protective rubber bumper
2. Open the protective rubber bumper

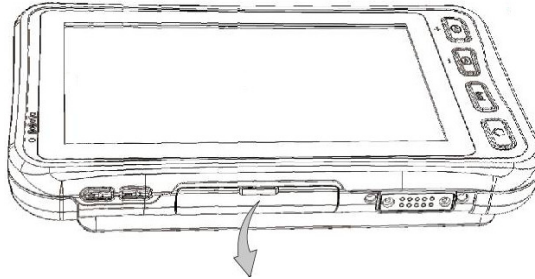

 3. Locate the SD and SIM Card as follows




4. Insert the SIM card (with the gold parts facing up and cut-off corner facing out) and push it in the direction of the arrow as shown in the figure
5. Push the SD card holder in the direction of the arrow to insert it.


### Secondary Battery Installation

M700D is equipped with Secondary battery, to install the Secondary battery:


1. Place the secondary battery facing down and then locate the port on the back side of the device, as shown in the following pictures

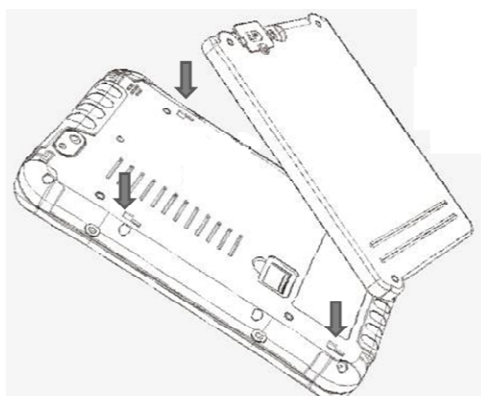

2. Place the secondary battery and the device and pull it downward

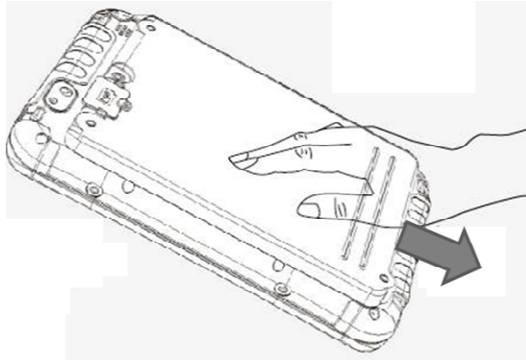


3. Secure the secondary by screw it within 4 points (marked in red)

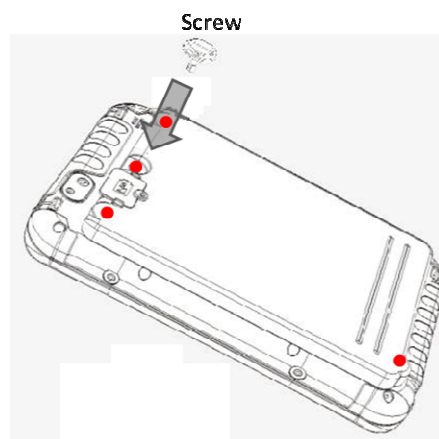

To remove the Secondary battery:

1. Unscrew the battery from the back side of the device
2. Push it upwards
3. Remove the secondary battery from the device

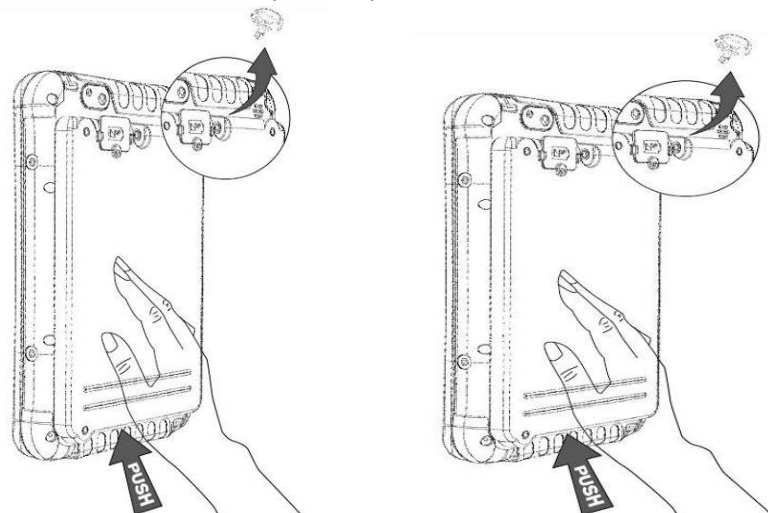


## Battery charging

M700D can operate either on the external AC power adapter or internal battery power. It is suggested that user use AC Power when charge the Tablet PC for the first time. Please charge the battery before using the Tablet PC for the first time, charge the battery until the LED indicator turns solid green. To charge the M700D, use a cable or a docking with appropriate power supply. For more information about Power management, see [chapter xxx](#).

To charge the battery using 12V DC in:

1. Remove the protective rubbed bumper on the side of the device
2. Locate the DC Jack
3. Connect the power supply output connector to the input power port on the Device
4. The battery charge LED indicates the battery charging status

LED Status	Indication
OFF	M700D is not charging or not properly connected
Solid Red	Low battery
Solid Orange	Charging in progress
Solid Green	Charging is completed

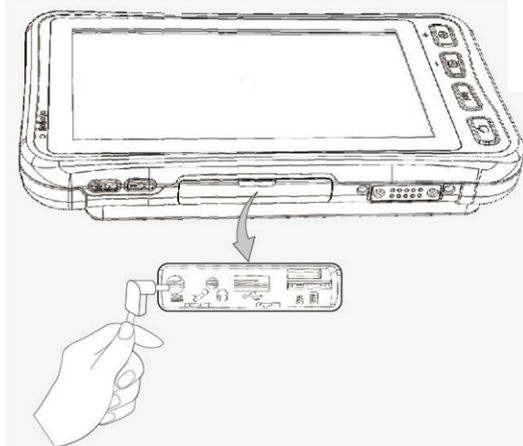


Use only the AC adapter included with M700D. Using other AC adapters may damage the Tablet PC

## Turning On and Off the Device

### Turning the M700D On

1. Place the device on a flat and stable surface or hold it
2. Make sure the device is either connected to AC power or to the battery pack with power
3. Press and hold the power button for 3 seconds, located on the right side of the unit

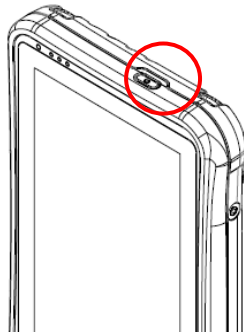


 



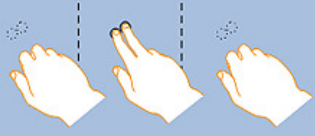
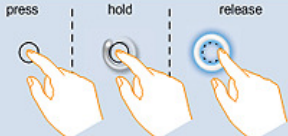
 
### Turning the M700D Off

1. To turn off the device, select the “shut down” command from the Windows operating system. Or,
2. Continuously press the button for more than 8 seconds to force the Tablet PC turn off immediately

## Chapter 3: Operating M700D Tablet PC

## Using the Touch Screen

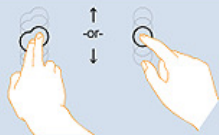To gain full access of the Windows interface is by using your finger to manipulate icons, on screen keyboard, menu items, and other items on the touch screen.

GESTURE	WINDOWS USAGE	GESTURE ACTION	ACTION (○= finger down   ○= finger up)	Single Contact	Multi Contact
Tap / Double Tap	Click / Double Click			★	★
Panning with Inertia	Scrolling	Drag 1 or 2 fingers up and down			★
Selection / Drag (left to right with one finger)	Mouse Drag / Selection	Drag one finger left / right		★	★
Press and Tap	Right-click	Press on target and tap using a second finger			★
Zoom	Zoom (defaults to CTRL key + Scroll wheel)	Move two fingers apart / toward each other			★
Rotate	No system default unless handled by Application (using WM_GESTURE API)	Move two fingers in opposing directions -or- Use one finger to pivot around another			★
Two-Finger Tap	N/A – Exposed through Gesture API, used by Application discretion.	Tap two fingers at the same time (where the target is the midpoint between the fingers)			★
Press and Hold	Right-click	Press, wait for blue ring animation to complete, then release		★	★
Flicks	Default: Pan up/ Pan Down/ Back, and Forward	Make quick drag gestures in the desired direction		★	★

*Reference from Microsoft*

## Using Input Panel

Tablet PC Input panel is an accessory included in Microsoft Windows that allows input of text using stylus, touch screen, on screen soft keyboard or mouse. User can access Tablet PC

input panel in several ways and then move it so that it appears in a convenient location on the screen


## Open Input Panel


There are three different ways to open Input Panel:

1. Tap the input panel tab, which appears by default on the left edge of the screen. From the left side of the screen, drag the edge of the input panel to the center.




Or

2. Tap the start button , select All Programs, select Accessories, select Tablet PC, and then select Input Panel

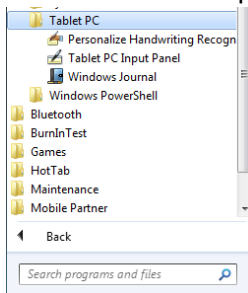

Or

3. Tap the Tablet PC Input Panel icon on the windows task bar. The Input Panel Icon does not appear on the taskbar by default. To make it appear, right click the taskbar, tap Toolbars, and then tap Tablet PC Input Panel.

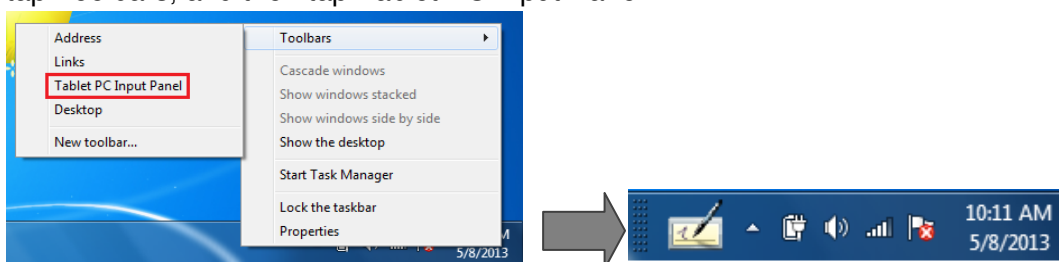

## Move Input Panel

After user open Input Panel, user can move it so that it doesn't cover certain area of the screen that you want to use and so that it's in a comfortable place for user to write. To move Input Panel when it is open:


1. Place user tablet pen on the title bar and drag Input Panel to the location of your choice

To move input panel when it is closed:

1. Place user tablet pen on the Input Panel tab, and move it up or down along the edge of the screen.

User can dock Input Panel so that it is anchored at the top or the bottom of the screen. When user docks Input Panel, it doesn't float on top of any open windows. To dock Input Panel:

1. Open Tablet PC Input Panel
2. Tap Tools and then tap Dock at Top of Screen or Dock at Bottom of Screen

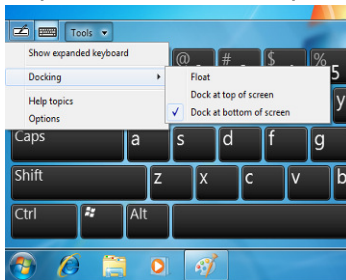

### Adjust Input Panel Size

To enlarge the size of Input Panel, please select the lower right corner of the input panel and then drag it







 
### Using Control Panel

The Control Panel provides shortcuts for user to utilize the applications and functions, e.g opening certain application, adjusting brightness, volume, lock the screen and others.

### Hot-Tab hotkeys Functions

Press Menu Button	Function Description	Function adjustment
-------------------	----------------------	---------------------

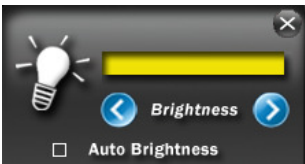

1 <sup>st</sup> Time	 Show Current Brightness	Press “Vol+” button to enhance brightness (Or drag by touch) Tap Close to save the change and exit UI	Press “Vol-” button to reduce brightness (Or drag by touch) Tap Close to save the change and exit UI
2 <sup>nd</sup> Time	 Show Current Volume	Press “Vol+” button to increase the volume (Or drag by touch) Tap Close to save the change and exit UI	Press “Vol-” button to decrease the volume (Or drag by touch) Tap Close to save the change and exit UI
3 <sup>rd</sup> Time	 Show Current Battery Status		
4 <sup>th</sup> Time		Use the touch button to select the wireless communication. Then select enable/disable 1. WiFi on/off 2. Bluetooth on/off 3. 3G on/off (Optional 3G) 4. GPS on/off 5. Camera on/off	
5 <sup>th</sup> Time	 Show the system information	show the: 1. HotTab version 2. Product ID 3. BIOS version 4. EC version	

## Hot-Tab software Utility Functions

Use the Hot-Tab software utility to make it easy to program and define hot key user's most frequent application. Long press the F1 button on the M700D and the utilities menu will appear at the center of desktop.



## Utilities

There are four utilities functions which are:




### 1. Virtual Mouse


Tap the virtual mouse and it will appears instantly on the desktop




### 2. Screen Rotation.

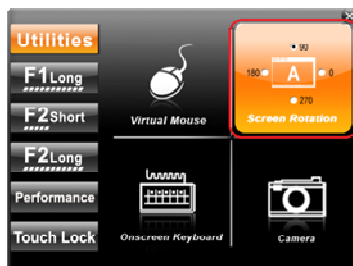

### 3. Onscreen keyboard

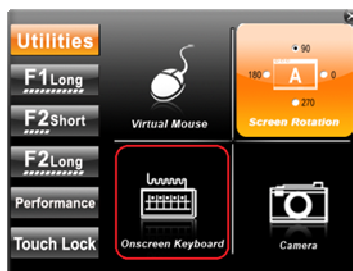


### 4. Camera

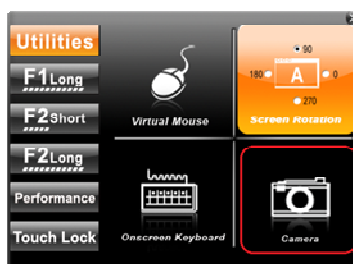


## F1 and F2 Shortcut Function Key

To suit users' need, users can modify or assign the associated applications or commands to these buttons using Hotkey software program. To assign these hotkey:

1. Tap F1 Long menu on the left side of utilities function
2. Select one application or software as hotkey function  
User can set F1 button as a hotkey to open the programs listed on the menu or use "Browse" and choose the execution program file

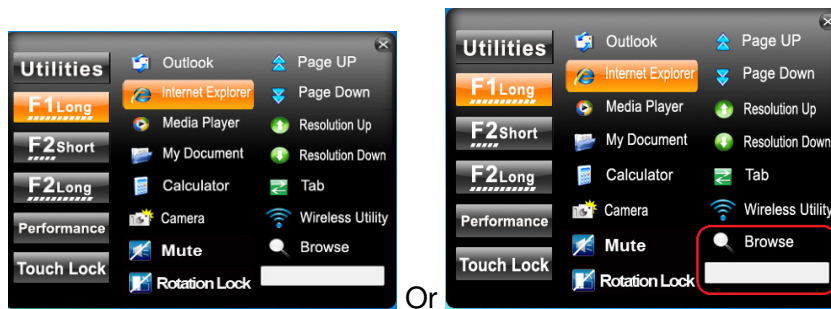

3. After selected, the assigned software or application will be open immediately when user Long press F1 button (in this example the assigned software / application is Internet Explorer)

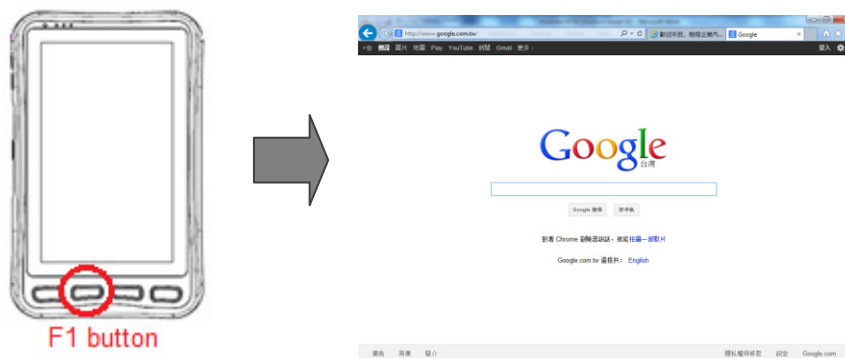

4. Repeat the same step to assign F2 Short and F2 Long for short function key

## Performance

There are four performances:



1. Extreme Performance
2. Office / Document
3. High Performance
4. Power Saving

## Touch Lock

To lock the touch screen and all buttons on the tablet



## Chapter 4: Connecting to Network and Devices

### Connecting to Bluetooth Devices

## Using Bluetooth Feature


M700D is equipped with Bluetooth 2.1 + EDR module for default function of the Tablet PC series. Depending on the application, Bluetooth module can give user capability for short range wireless communications between devices without requiring a cable connection. The transmission is able to go through walls, pockets and briefcases as long as two devices are within 10 meters range.

### Connect to a Bluetooth device


1. Push Menu button 4 times and make sure the Bluetooth function is “On”



2. Double click the Bluetooth shortcut in the task bar

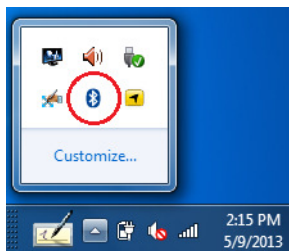

3. Tap Search for Devices and it will search any Bluetooth device automatically
4. Choose the Bluetooth device that user wants to connect and right click to choose **Secure Pair...** then the device will be connected to the module

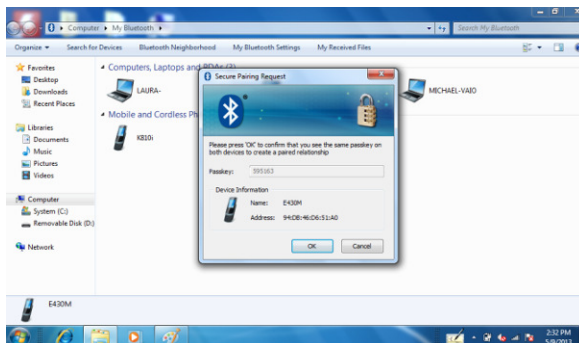

### Disconnect from a Bluetooth device

1. Tap the device in the Bluetooth settings screen
2. Tap **Unpair**

## Connecting to Wi-Fi

To connect to Wi-Fi:

1. Push Menu Button 4 times and make sure the Wi-Fi function is “On”




2. Please use the default Windows **Wireless Network Connection** utility




## Using 3G Function

1. Insert the SIM Card into SIM Card Slot
2. Push Menu Button 4 times and make sure the 3G function is "On"



3. Tap the 3G application program (Mobile Partner) 
4. Confirm whether to detect the telecommunications system operators and then press connect to connect to 3G network

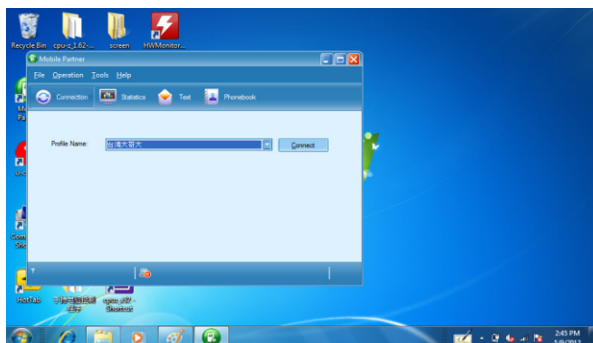

## Chapter 5: Power Management

Our Tablet PC support one set of AC adapter and power cord by country area, please contact your dealer for appropriate power cord based on country area.

## About AC Adaptor



The adapter operates in the range of 100~240 V AC. The AC adapter serves as a converter from Alternating Current to Direct Current power because the Tablet PC runs on DC power input (however, an electrical outlet usually provides AC power)



To disconnect the AC adapter, disconnect the electrical outlet first and then follow by the plug from the Tablet PC. Reverse procedure may cause damage the AC adapter or Tablet PC



Always hold the plug when unplug the connector. Never pull out the cord



AC adapter is designed to use with Tablet PC only, connecting the AC adapter to other devices may damage the adapter

## Charging Status

The battery LED Indicator indicates the charging status, M700D charges one battery pack at a time. After the first battery is fully charged, it charges the secondary battery pack.

### Charging the Battery Pack

The battery Pack is the internal power source for the Tablet PC. It is rechargeable using the AC adapter. The operating time of a fully charged battery pack depends on how users using the device. When users' applications often access peripherals, it will lead a shorter operating time






Charging process will not start if the battery's temperature below 0°C (32°F). It is also recommended not to charge the battery when the temperature is above 45°C (113°F).



To prevent damage, the charging process may stop and the battery charge indicator will flash red light when the environmental temperature exceed 55°C (131°F)

## Charging Approaches

By connecting the AC adapter to the Tablet PC and an electrical outlet, the battery charge indicator on the tablet PC will turn orange to indicate the charging is in progress. When the battery is fully charged, the battery indicator will turn green.

	Power Mode	Battery 1 Status	Battery 2 Status
LED Indicator			
Indicator Status Description	<b>Blue light:</b> When Power On	<b>Red light:</b> Low battery	<b>Red light:</b> Low battery
	<b>No light:</b> When Power Off	<b>Orange Light:</b> Under charging	<b>Orange Light:</b> Under charging
		<b>No Light:</b> Fully charged	<b>No Light:</b> Fully charged
		<b>Green Light:</b> On using	<b>Green Light:</b> On using



During the charging process, do not disconnect the AC adapter before the battery has been fully charged to prevent prematurely charged battery

## Checking the Battery Level

In Windows operating system, user can check the approximate battery level using the battery meter function. To check the battery level:

1. Click the battery icon on the task bar
2. Click the outlet icon if the tablet PC using AC power

## Battery Low Signals and Actions

When the battery has approximately 10% of its charge remaining, the battery charge indicator will blink red light to alert the users. User can set up the battery threshold and signals under Windows operating systems.



The remaining operating time depends on how users are using the Tablet PC. If users are using audio subsystem or any wireless communication, the battery might run out of charge very quick



Immediately save the data, if user fail to save the data when the battery completely runs of charge, user will lose their data

## Power Management

M700D Tablet PC supports ACPI (Advance configuration and Power Interface) for power management. The power management features allows user to reduce the power consumption for energy saving. With and ACPI-compliant operating system such as Windows XP, power supply to different Tablet PC components is controlled on an as-needed basis. This allows maximum power conservation and performance at the same time. In general, windows power management works in following state:


Occurrence	Condition
Power to the Hard Disk is turned off	When the hard disk has been idle for a set of period
Power to the display is turned off	When the display has been idle for a set period. When the entire system has been idle for a set of period.
Tablet PC enters the standby mode. Hard disk and display are turned off and the entire system consume less power	When the display has been idle for a set of period. When user press the power button
Tablet PC enters the hibernation mode	When the entire system has been idle for a set of period. When user press the power button.

For detailed information on power management, please refer to Help Windows

## Chapter 6: Expanding M700D Tablet PC


### Connecting USB Device

M700D has USB ports for connecting USB devices such as a flash disk drive, scanner, printer, keyboard, or mouse. To connect USB device, plug the device cable into USB port of M700D.

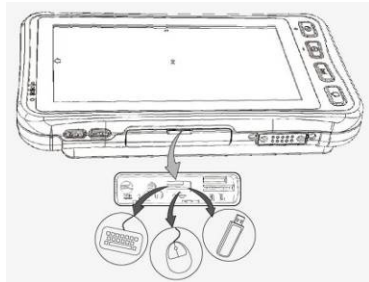

### Connecting Audio Devices

M700D has audio connector that supports both audio in and audio out devices. User can connect speakers, headphones, or earphone set. To connect an audio device, plug the device cable into the audio connector of M700D

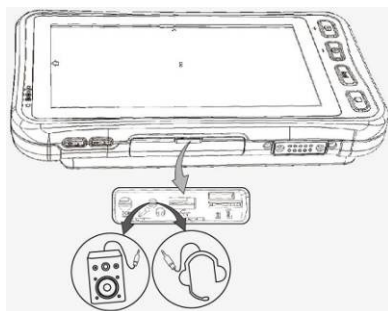



## Chapter 7: Using BIOS Setup

### To use BIOS setup

To enter the Tablet PC BIOS setup, user need to connect M700D with an external keyboard. Press “**Del**” key when the prompt appears on the screen during start up. The prompt screen shows only few seconds so user need to press “**Del**” key immediately.



Updated BIOS version may be published after the manual is released.  
Please check for the latest version on the website

User may need to run BIOS setup utility for a number of reasons such as:

1. Error message on screen, indicate to check BIOS setup
2. Restoring the factory default settings
3. Modifying the specific hardware specification
4. Want to optimize the specification

In order to control the keyboard to select BIOS utility setup, user need

Keyboard Icon	Function Description
← →	to select a menu title
↓ ↑	to select an item or option
Enter	to go to the sub menu when available to open or close the option window when an item is selected
Esc	to leave sub-menu and return to main menu

## BIOS Functions


### Main Menu

Main menu consists of the information of the Tablet system including BIOS version, processor RC version, system language, time and date.




## Advance Menu

Advanced menu consists of the selection of PXE OpROM and Watch Dog Timer, settings of PCI Subsystem, ACPI, and S5 RTC Wake. It also consists of the configuration information of CPU, Thermal, IDE/SATA, USB, and PPM Configuration.

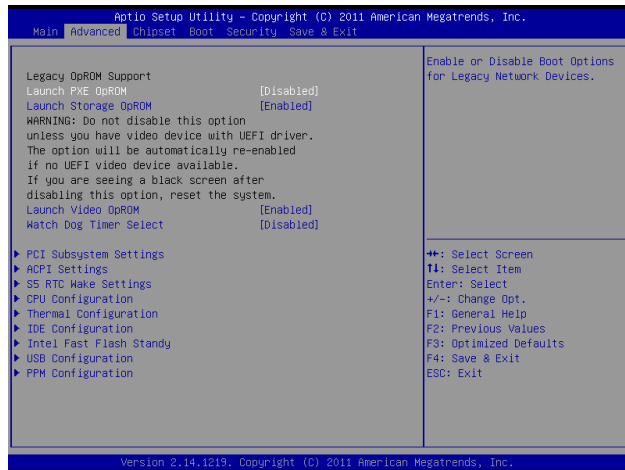


## Chipset Menu

The Chipset menu consists of the information for Host Bridge and South Bridge

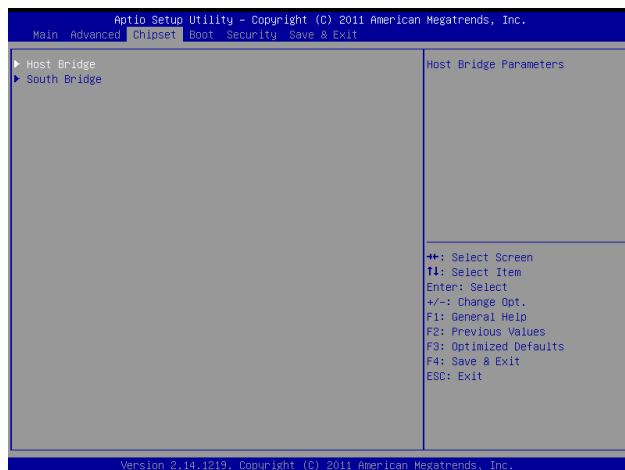


## Boot Menu

The boot menu sets the sequence of the devices to be searched for the operating system. The bootable devices will be automatically detected during POST and shown here, allowing user to set the sequence that the BIOS uses to look for a boot device from which to load the operating system. A brief description of button usage is listed here:

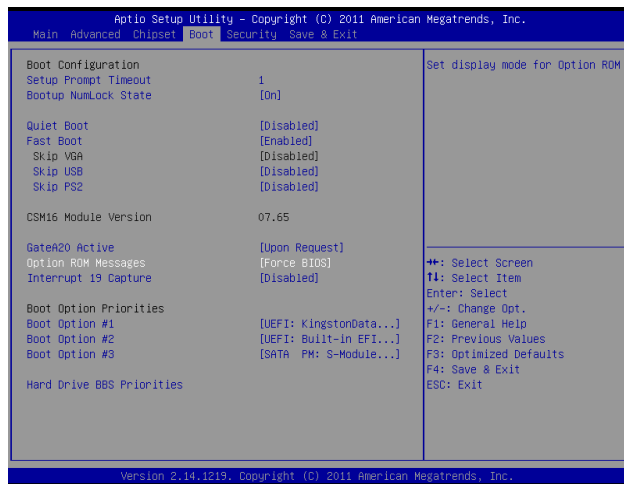


## Security Menu

In the security menu, users can set Administrator password, User password, and HDD security configuration.

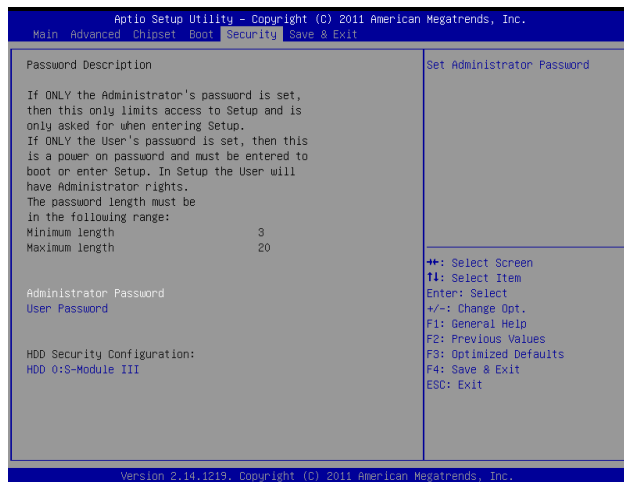

## Save and Exit Menu

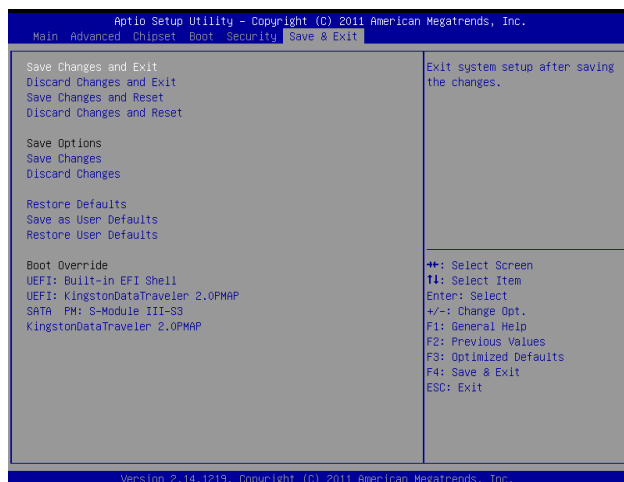

The Exit menu displays ways of existing BIOS Setup utility. After finishing with the settings, user needs to save and exit so that the changes can take effect.

Save & Exit options	Function
Save changes and Exit	Saves the changes and exit BIOS setup utility
Discard changes and Exit	Exit BIOS setup utility without saving the changes
Save Changes and Reset	Saves the changes and reset BIOS system
Discarding Changes and Reset	Reset BIOS system without saving the changes
Save Changes	Done so far to any of the setup options
Discard Changes	Done so far to any of the setup options
Restore Defaults	Loads / restore the factory default values for all the items
Save as User Defaults	Saves the changes done so far as User Defaults
Restore User Defaults	Loads/ restore the User Default values for all the items

## Chapter 8: Using Recovery DVD

### Hardware Preparation

User need to prepare following items before start to recover the Tablet

1. USB keyboard
  2. USB DVD-ROM Driver
  3. USB HUB
- Connect DVD-ROM Driver and Keyboard through USB Hub
  - Connect the USB Hub to M700D's USB port
  - Make sure the DVD-ROM driver has been recognized by the M700D tablet.

### Start to recover the system by recovery DVD

To recover the system:

1. Reboot the tablet, then press "**Del**" key on the keyboard to get into the BIOS setup mode
2. Set DVD-ROM driver as the first priority of the boot device
3. Choose "Save Changes and Reset" under "Save & Exit" tag.
4. The tablet will reboot again and then press any key on the keyboard when there is a following message "*Press any key to boot from CD or DVD*"
5. DOS windows will open and please type `reccf`
6. The recovery process will be started automatically

## Chapter 9: Using Camera

Winmate M700D is equipped with 2 MP on the rear side, which user can use to capture photos or video

### Open Camera

1. Push Menu Button 4 times and make sure the 3G function is "On"




2. Push F1 Button and in the utilities, tap Camera  
Camera opens in Portrait Mode, ready to take a picture or shoot a video



Make sure the protective lens cover is clean before taking pictures. A lens cover with smudges from fingers can cause blurry picture


### Take a picture


- 1.....Adjust the exposure, flash, and other necessary settings. Or leave it automatic.
- 2.....Frame your subject / object on screen
- 3.....Tap the On Screen Shutter icon
- 4.....Touch the thumbnail to view, share, or work with your pictures in Gallery

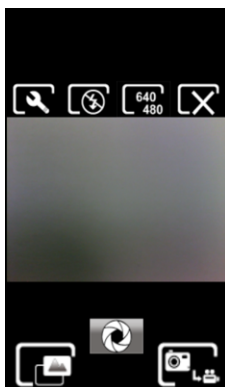







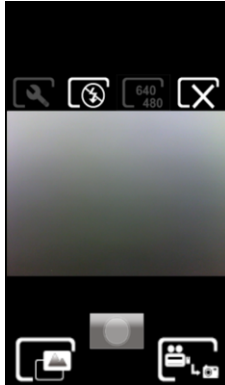

### Shoot a video

- 1.....Tap to switch from camera to video mode
- 2.....Point the lens to record the scene where you want to start

- 3.....Tap  
the On Screen Start Video icon  
The time remaining to shoot counts down at the left; when less than a minute is left,  
the countdown turns red
- 4.....Tap  
the  icon again to stop shooting



### The Camera Control Buttons

Icon	Description
	To select the save location of the Picture and Video To select the Picture Quality [ Low, Medium, High, or Best]
	To adjust the Flash (Turn ON or OFF the flash)
	To adjust the Picture resolution, user can select (1024 x 768) or (1600 x 1200)
	To close the Camera function
	To go to the file folder where user save all the pictures or videos
	To change the Camera into Video mode or vice versa
	Snap button in camera mode
	Record button in video mode

## Chapter 10: Accessories

### M700D Standard Accessories

Standard Accessory	Details
Adapter with Standard Power Cord (Euro / US standard type, 1.8 m)	Input : AC 100-240V 50/60 Hz Output : 12V DC
M700D Manual & Driver CD	Allows user to make an update
Recovery CD	Allows users to make a recovery

### M700D Optional Accessories

Optional Accessory	Details
Docking	<ul style="list-style-type: none"> <li>• Docking cradle for M700D</li> <li>• Hold the tablet tightly on the moving vehicle</li> <li>• Support both terminal block &amp; 2.5Ψ Power jack input</li> <li>• ~36 V DC-in wide range DC input</li> <li>• P52 design (Rain prove)</li> </ul>
Hand Strap	to secure the device when using it
Capacitive Touch Stylus	to use it as a mouse or as a finger to perform regular touch functions and to write in application where applicable
Vehicle Adapter	Input 5V DC cigarette lighter socket USB car charger
Secondary Battery	Li-Polymer Battery 5200mAh